

Using Your Mains Charger

LED Indicators Explained

- LED Green flashes during charge, lights constantly at charge end.
- LED Red flashes at error.

Safety Instructions

- Suitable for charging CorDEX Approved Battery Packs Only (CDX2341-107). There could be a risk of explosion if other types of batteries are charged.
- Please note that batteries can become warm during the charge cycle.
- Do not attempt to open the charger
- Keep the charger in a dry place (indoor use only).
- Use the supplied CorDEX Charging Station only.
- In order to avoid the risk of fire and/or electric shock, the charger must be protected against high humidity and water.
- Do not use the charger if there are any signs of damage to the housing, mains, pins, cables or connectors. In case of a defect please return to an authorised service centre.
- Keep the charger out of reach of children.

If the safety instructions are not followed, damage to the charger, batteries or even serious injury to the user may occur.

Operating Instructions

Connect the relevant adaptor from the ones supplied by sliding onto the main body until it clicks into place. To remove the adaptor depress plastic tab whilst sliding adaptor away from the main body.

Plug charger into the mains power supply (100-240V AC), connect to CorDEX battery charging station.

With the supplied adaptors the charger is suitable for use worldwide.

Please Note

Batteries will become fully charged within 2 hours. CorDEX do not recommend charging batteries for longer periods as this may lead to shortened battery life.